



# HP iPAQ H2200 LCD Screen Replacement

Written By: Tyler Andrews



## INTRODUCTION

The purpose of this guide is to instruct the reader on how to replace the LCD screen of their HP iPAQ H2200 device.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [T5 Torx Screwdriver](#) (1)
-

## Step 1 — Battery



- Press and slide the battery cover tab to remove battery cover.


## Step 2



- Pull on the black tab to lift the battery out of the battery compartment.




## Step 3 — Main Board

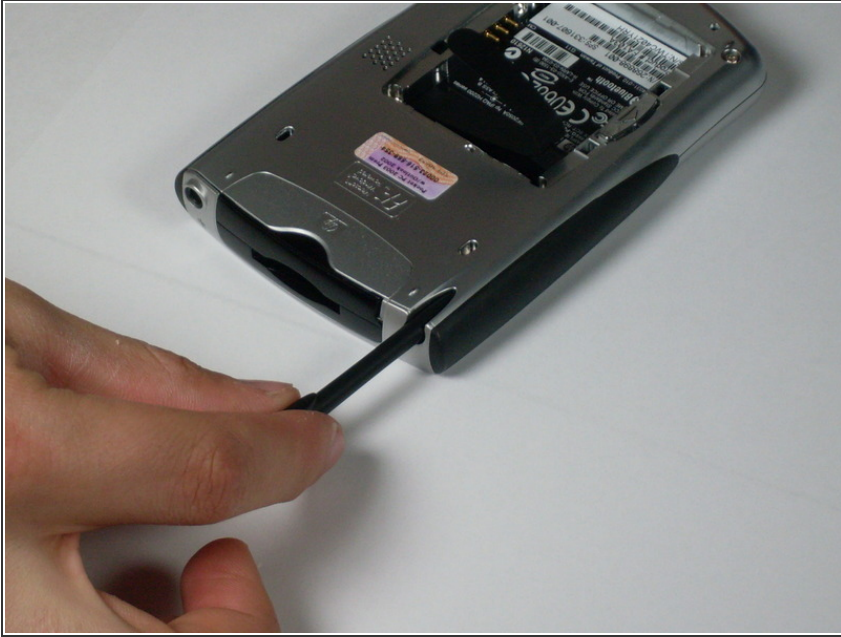

- Remove the stylus by sliding it out of the slot.

## Step 4

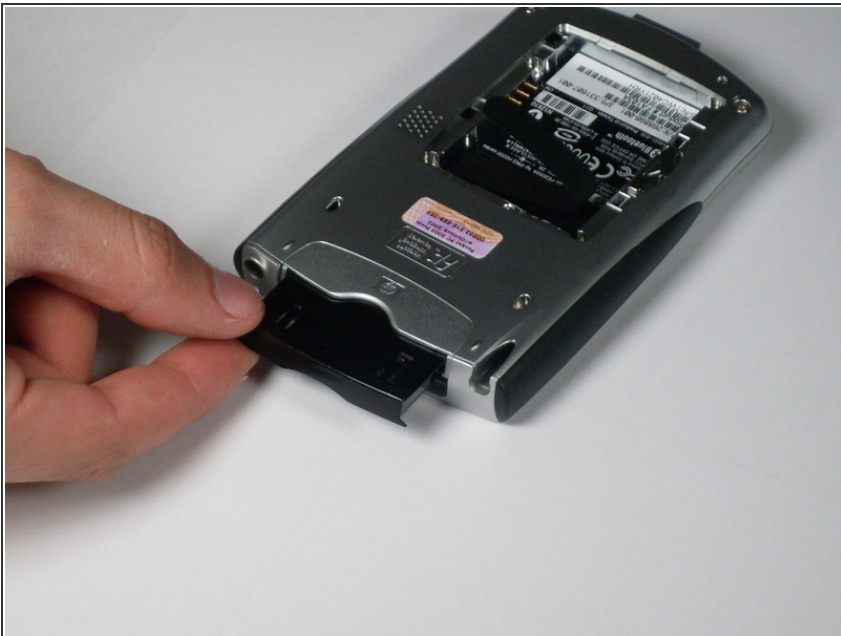



- Remove the CF card by sliding it out of the slot at the top of the device. (the black slot substitute).

## Step 5



- Press down and push the black side strips toward the top of the device to remove them.



## Step 6

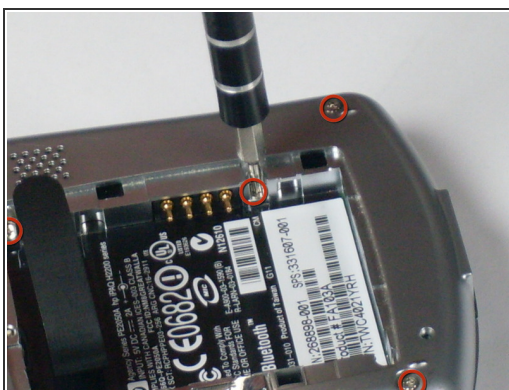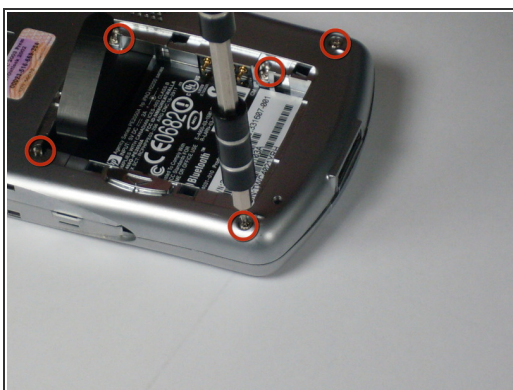

- Using the T5 Torx screwdriver, remove all six screws on the back and all screws on each side of the device.




## Step 7

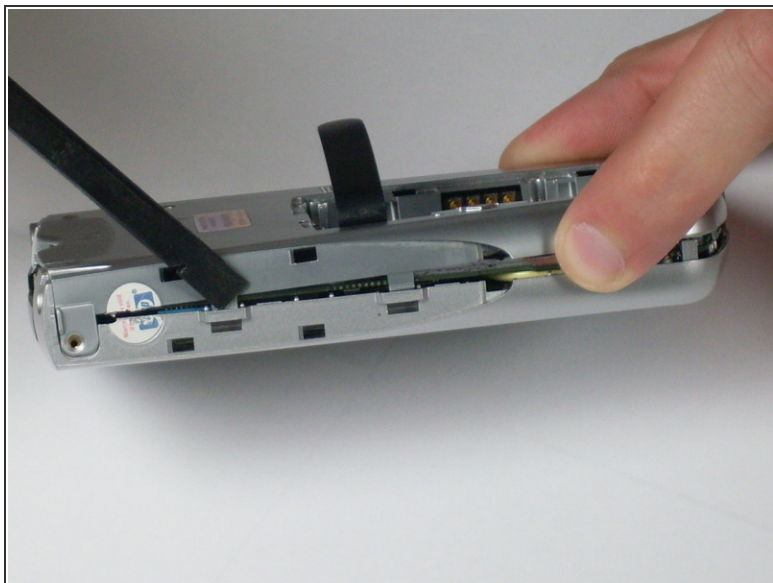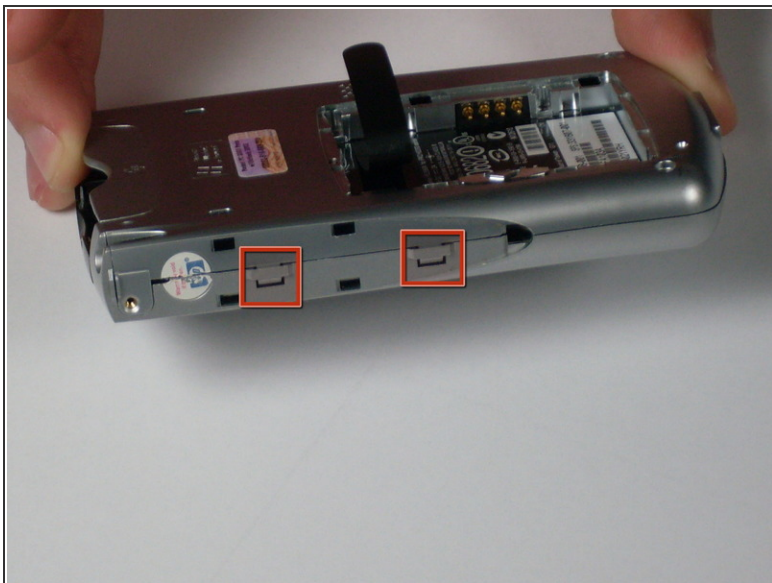

- Remove the back faceplate by pushing and loosening the 4 side slots (2 on each side).

## Step 8

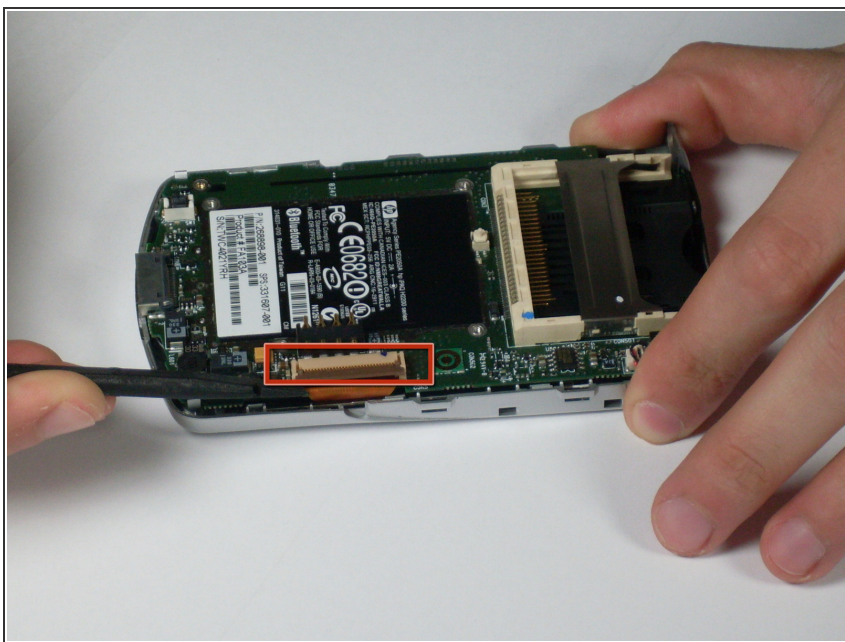


- Open the LCD connector, where the orange strip attaches to the main board.

## Step 9



- Carefully remove the orange LCD strip from the connector.


## Step 10

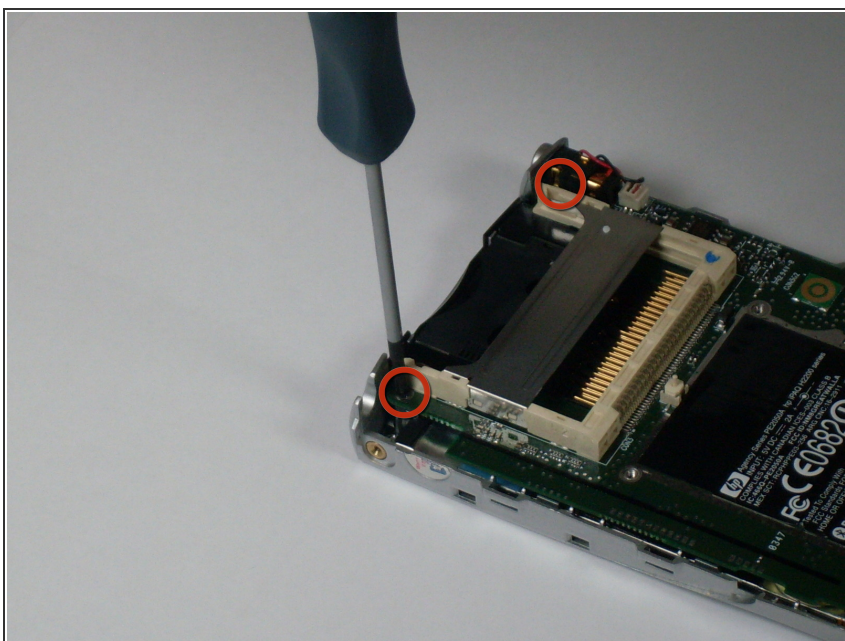

- Unscrew the 2 screws located at each top corner of the main board.




## Step 11

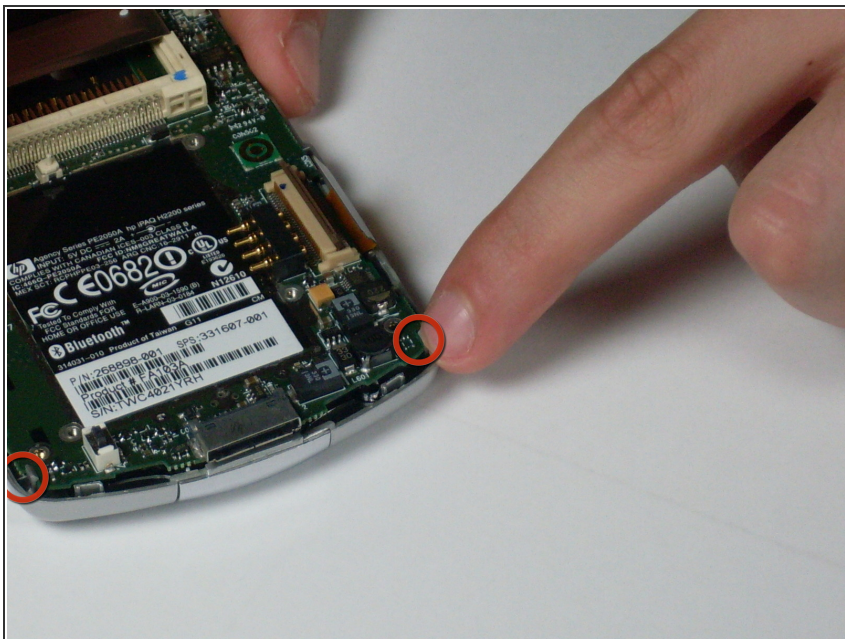

- Remove the main board by pushing outward on the two tabs located on each side near the bottom of the device.


## Step 12 — LCD Screen

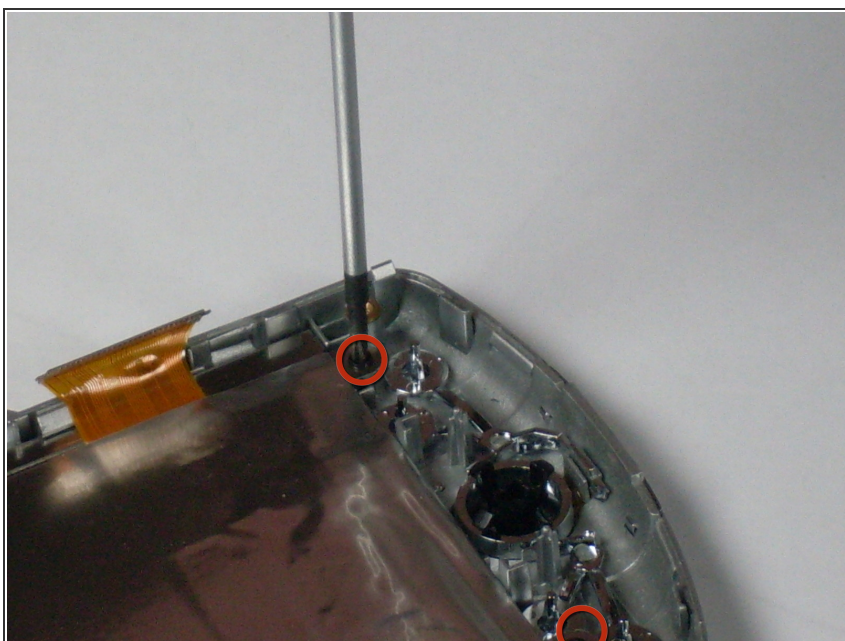

- Unscrew the two bottom screws on LCD screen that were previously located under the main board.



## Step 13

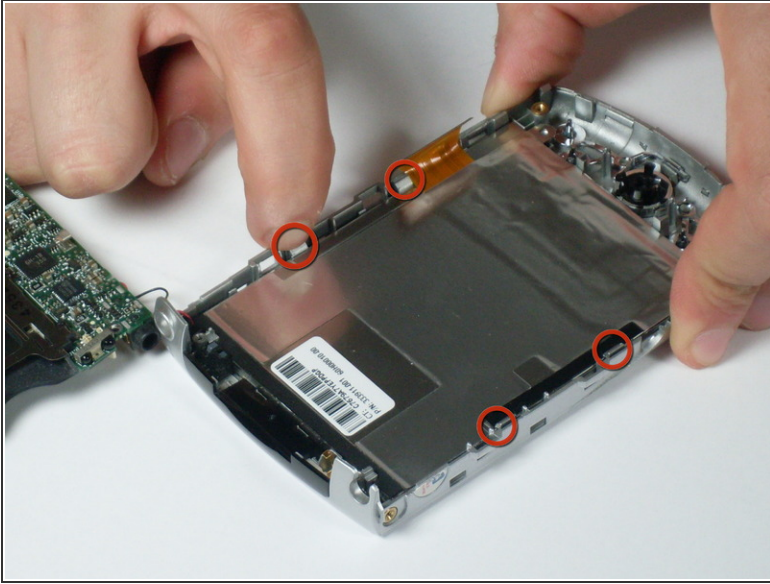

- Press on side tabs to loosen and remove the LCD screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-19 01:44:22 AM.